

VYCO Vinyl Board Cover

Installation Instructions


For VBC44, VBC55, and
VBC77 series models

Tools required: Utility knife, straightedge, and 1" double-sided tape.

To Install:

- 1** Unroll and lay flat for at least 24 hours as shown in *figure 1*. VYCO is produced and shipped in tension-wound rolls and needs to relax before being secured to a surface. For best performance, unroll and lay flat at room temperature for at least 24 hours to allow material to return to its natural, flat state. **Never** apply heat directly to VYCO.

Figure 1

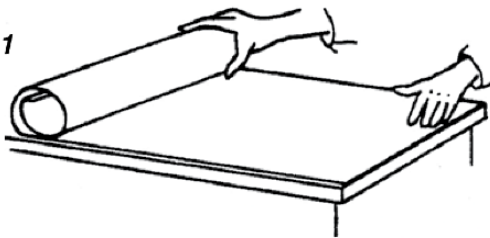

- 2** Cut to size. All VYCO sheets are shipped slightly oversize to allow for variations in drawing board and tabletop sizes. For the best fit, trim down to the exact dimensions of the surface. This can be done either before or after the VYCO is adhered. Use a very sharp utility knife and a straightedge to ensure accuracy.
- 3** Clean and prepare table surface. VYCO board cover is soft and pliable and will conform to the surface beneath. Dirt and tabletop imperfections under the VYCO will create an uneven work surface. Be sure to remove all particles of dirt and dust before attaching VYCO. Deep imperfections can be filled with wood filler and sanded smooth.

- 4** Apply 1" wide double-sided tape to table surface as shown in *figure 2*. Leave top liner on tape for time being. For most applications tape only needs to be used along the top edge of tabletop. For a more secure fit, tape can be applied along the other three edges as well.

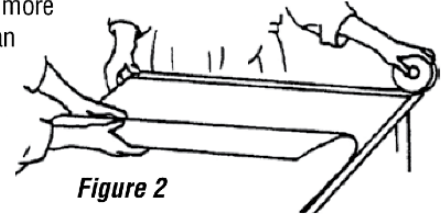


Figure 2

- Hint** Apply tape along the outer edges only, never in the middle. 1" wide tape is recommended. Use only thin polyester-based tapes for smooth results. Foam-based tapes are too thick and will create a raised surface.

- 5** Position sheet on tabletop. With the top tape liner still in place, position the VYCO on the tabletop in its exact location. Then, without moving the sheet, raise back the top edge and peel off the tape liner beneath. Lay the sheet back down and press securely. Smooth VYCO out from the center to prevent wrinkling, as shown in *figure 3*, before following the same procedure with other tape edges, if so desired.

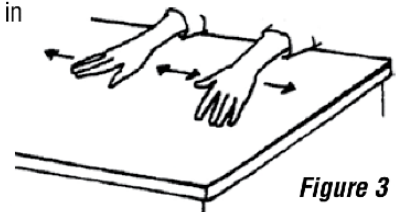


Figure 3

To Clean:

VYCO board cover cleans easily with soap and water or mild household cleaners. Avoid use of aggressive or abrasive cleaners as they might damage the vinyl material. Test cleaners on a small sample or out of the way place before proceeding.

5-ply VYCO vinyl board cover is designed specifically for the protection of heavily used surfaces or furniture.

- Self-sealing surface.
- Will not deteriorate, discolor, or crack.
- Easy to clean with a damp cloth.

VYCO is available in different color combinations and in sheet sizes ranging from 18" x 24" up to 43½" x 84". Custom sheet sizes and 10 yard rolls are also available.

VBC44

One side no-glare green, the other a rich cream color.

VBC55

Translucent for lightboxes, glass tabletops, or over graph paper.

VBC77

One side elegant pearl gray, the other a soft matte white.

CAUTION: Not for applications that use heat guns, glue guns, soldering irons, or other direct, high-heat sources. Phthalate vapors may be released under high heat. In case of inhalation of heated vapors, seek fresh air.